
RsLogix 500 - Printing


 In order to get a copy of your ladder logic for your lab or your notes, you first need to adjust what is printed. By default, a full report that is about 12 pages is created. But we only want the program and nothing else. To limit the report, first go to File and then Report Options.



2) This will bring up the Report Options window. Every item checked will be added to the report. Start by pressing Deselect All so all the checkboxes are cleared.

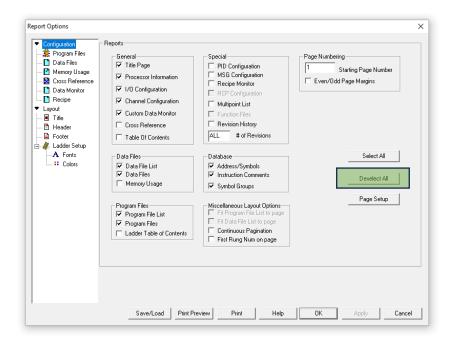


3) Select **Program Files** under the Program Files group.

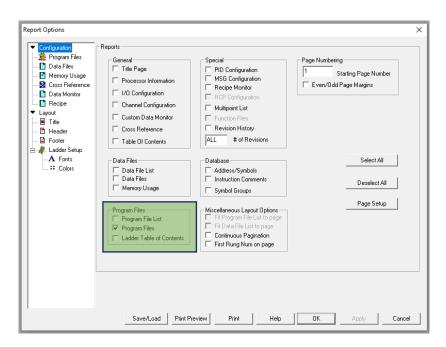

4) Now you can print your program. But instead of sending to a printer, you will save it to a PDF file and save it on a flash drive or Email it to yourself. You start like you would normally print a file. You select the file pull down menu and select



5) This will bring up the familiar print window. But the printer will be **Microsoft Print to PDF**.

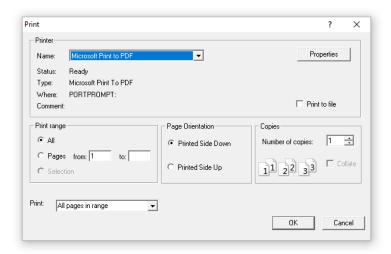

6) Just select the name of your file and where you want to save it. This file will be put on a flash drive or emailed to yourself.

